

Memory 1000 Multichannel data logger



SUMMARY

1	Introduction	4
2	User interface and menus.....	5
3	Alarms.....	12
4	Standard configuration.....	13
5	Advanced configuration	20
6	Printer	22
7	Memory 1000 Data Manager	28
8	Electrical connections	32
9	Mechanical assembly.....	36
10	Specifications	37
11	Use	38
12	Applicable Standards.....	38
13	Responsability and residual risks.....	38
14	Disclaimer	38
15	Annexe A – Models and Accessories.....	39
16	Annexe B – Eliwell Instruments	41
17	Analytic Index	43

1 INTRODUCTION

Memory 1000 is a multi-channel, EN 12830 compatible data logger for recess and flush wall-mounting.

Specifications

- Power supply 230V ~ 50Hz
- Up to 10 analogue/[digital inputs](#)
- Relay and buzzer alarm signalling
- RS-485 port to expand inputs via compatible Eliwell Televis controllers
- Graphs and tables printed on integrated [printer](#)
- RS-232 port to export data using MS Windows® software (supplied)
- Compatible with **RadioAdapter** wireless networks
- Real-time measurements on the wide, backlit display

Pluses

- Easy-to-[use](#)
- Controllers connected via RS-485 network or RadioAdapter wireless modules
- Manages all aspects of network controller [alarms](#)
- 12-months+ data logging capacity
- A model to fit all application requirements

The Memory 1000 wall-mounted or recessed data logger can manage four separate rooms by means of four analogue plus four digital channels.

The 12+ month data logging capacity makes Memory 1000 the ideal solution for small installations requiring HACCP data recording.

The graphic LCD display allows the status of the inputs to be viewed clearly and provides access to the recorded data.

Memory 1000 can manage two alarm levels for each analogue channel and can manage alarm signalling with configurable relay outputs and buzzers.

1.1 Models available

An extended range of Memory 1000 [models](#) are available, covering all application requirements from simple data loggers plus [printer](#), to comprehensive data logging systems.

See [Annexe A – Models and Accessories](#).

2 USER INTERFACE AND MENUS

Memory 1000 has a green LCD graphic display with backlit functions, contrast control and on/off modes configurable from parameter.

The display serves as the main user interface and shows various different types of information:

- Default / main views (i.e. values of data read).
- Selection menu.









2.1 Keys

There are 6 *keys* on the front panel. Each key (see the two tables below) has:

- A "direct" action (marked on the key).
- An "associated" function (marked on the front panel of the device beside the key). In the manual, this is shown in square brackets (e.g. [UP]).

2.1.1 Description of keys and associated functions

Key	Description Key	Press once (press and release)	Key [associated function]	Menu / Comments
	UP (UP)	<ul style="list-style-type: none"> • Increases a value • Goes to the previous label 	YES (^=YES) Confirms the selection/change	
	DOWN (DOWN)	<ul style="list-style-type: none"> • Decreases a value • Goes to the next label 	NO (v=No) Cancels selection/change	

Key	Description Key	Press once (press and release)	Key [associated function]	Menu / Comments
	SX (Left)	<ul style="list-style-type: none"> Goes back to previous level 		Not enabled in General menu
	DX (Right)	<ul style="list-style-type: none"> Confirms value / exit and saves new settings Moves to next level (open folder, subfolder, parameter, value) Opens state Menu 		Not enabled in General menu
	OK Confirm	<ul style="list-style-type: none"> Opens modify value Confirms value entered 		
 Only key enabled in <i>Main Display</i>	Menu	<ul style="list-style-type: none"> Opens general menu Opens menus Esc(ape) function – goes back to previous level** 		See General Menu **NOTE: if you are asked to confirm changes ^=YES / v=No the key is not enabled
	Timeout	If no <i>keys</i> are pressed for more than one minute, the <i>Main Display</i> returns. N.B.: any changes/settings will not be saved on exiting: <ul style="list-style-type: none"> For a timeout Using the menu key 		

2.1.2 Edit values

Pages consist of fixed and editable values.


To edit a value, highlight it with the cursor using the Up and Down *keys*.

After it has been highlighted, press the OK key to enable editing (the field is enabled for editing if the cursor highlighting it flashes).

Use the Up and Down *keys* to set the required value then confirm this by pressing the OK key again.

2.2 LEDs and Display

There are 4 icons (LED).

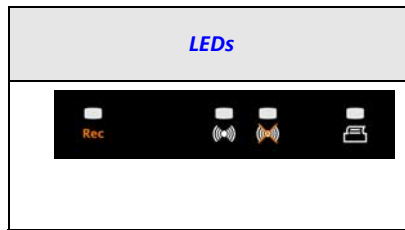

Icon		Colour	Permanently on	Blinking	Comments
	Jogging data	Red	Data logging ACTIVE	//	
	Alarm	Red	Active <i>alarms</i> NOT acknowledged	Active <i>alarms</i> acknowledged	
	<i>Alarms</i> acknowledged	Amber	Acknowledge time running	//	
	Print	Green	Print suspended / failed	Printing	

2.3 Main display

dd/mm/yy	hh:mm		dd/mm/yy	hh:mm
ONBOARD – P1	4.5		ONBOARD – P8	2.3 -
ONBOARD – P2	5.0		ONBOARD – D1	Not active
ONBOARD – P3	18.3 -		ONBOARD – D2	Not active
ONBOARD – P4	20.4 -			
ONBOARD – P5	18.6 -			
ONBOARD – P6	18.4 -			
ONBOARD – P7	2.0			

The *Main Display* on the LCD (when no *keys* pressed) have been:

- Date and current time (dd/mm/yy and hh:mm formats respectively).
- List of probe values and/or digital input states.
- The following symbols may appear beside the probe value:
 - – value within limits
 - **High alarm**
 - **Low alarm**

In the event of an alarm, the relative value will be shown.

The display can be fixed or with automatic scrolling enabled (see section 5.0 Display).

In the example, there are 8 *analogue inputs* marked with labels P1, P2, ... P8 and 2 *digital inputs* D1, D2.

2.3.1.1 Analogue inputs display

All *analogue inputs* are shown with the following information:

- Name of analogue input P1, P2,...P8**.
 - ONBOARD Px if the resource is integrated (see section 4.4 *Onboard Resources*).
 - Px for Televis network resources (see section 4.5 *Network 1*).
- Value (2 figures with decimal point indicating tenths of a degree) or Probe Error.
- Unit of measure (C degrees centigrade; Bar pressure in bar; etc.).
- Alarm condition.

2.3.1.2 Digital input display

All *digital inputs* are shown with the following information:

- Name of digital input D1, D2**.
 - ONBOARD Dx if the resource is integrated (see section 4.4 *Onboard Resources*).
 - Dx for Televis network resources (see section 4.5 *Network 1*).
- State (active/not active).
- Alarm condition.

** The number of resources depends on the system settings and model.

2.4 Settings - General Menu

Access to system information is organised into menus.
 Access is given by the *keys* on the front panel (see relative sections).
 Access to each individual menu is explained below (or in the sections indicated).

There are 7 menus:

- 0 **Suspend** see section 0 - Suspend
- 1 **Rec On/Off Menu** see paragraph 1 - Rec On/Off
- 2 **Data Menu** See **Print and Printer section** / paragraph 2 – *Data*
- 3 **Alarms Menu** See paragraph 3 - *Alarms*
- 4 **Std Configuration Menu** See **section 4 - Standard Configuration**
- 5 **Advanced Configuration Menu** See **section 5 - Advanced Configuration**
- 6 **System Info Menu** See paragraph 6 - System Info

GENERAL MENU		Description	
	PRINT		
0 Suspend		Stops current printing job.	
	REC ON/OFF	Password-protected menu ('Data recording')	
1 Rec On/Off	1.0 Rec Off 1.1 Rec On	Stops logging of data read. Starts logging of data read.	
	DATA		
2 Data	2.0 Recording periods	Displays the most recent dates for which local data archives exist.	
	2.1 -----		
	2.2 Graph print	2.2.0 <i>Onboard resources</i>	Sends graph of values for an onboard analogue input to the <i>printer</i> .
		2.2.1 <i>Network 1</i>	Sends graph of values for a <i>network 1</i> analogue input to the local <i>printer</i> .
		2.2.2 -----	
	2.3 Print text	2.3.0 <i>Onboard resources</i>	Sends list of numbers in table format of an onboard analogue input to the <i>printer</i> ..
2.3.1 <i>Network 1</i>		Sends list of numbers in table format of a <i>network 1</i> analogue input to the <i>printer</i> .	
	2.3.2 -----		
	ALARMS		
3 Alarms	3.0 See Active <i>Alarms</i>	Displays the list of active <i>alarms</i> .	
	3.1 -----		
	3.2 Alarm log print	Prints the alarm log.	
	3.3 Reset alarm log (PSWBREC)	Stores the date and current time in flash memory which serves as start date for alarm log print to the next alarm log print.	
	STD. CONFIG.	Password-protected menu ('Standard')	
4. Std. Configuration	4.0 -----		
	4.1 Clock and Lang	To set date, time and navigation language.	
	4.2 <i>Plant</i>	To enter the name of the <i>plant</i> and data logging frequency in internal memory.	
	4.3 -----		
	4.4 <i>Onboard resources</i>	4.4.0 General Configuration	
		4.4.1 <i>Analogue Inputs</i>	To set the number of ai (<i>analogue inputs</i>) and di (<i>digital inputs</i>) actually used.
		4.4.2 <i>Analogue Alarms</i>	To set analogue input parameters.
		4.4.3 <i>Digital Inputs</i>	To set alarm functions for <i>analogue inputs</i> .
		4.4.4 <i>Digital Alarms</i>	To set digital input parameters.
	4.4.5 <i>Print Config.</i>	To set alarm functions for <i>digital inputs</i> . Sends configuration data for <i>onboard resources</i> to the <i>printer</i> . (For models with printer only).	
	4.5 <i>Network 1</i>	4.5.0 Network Model	Sends configuration data for <i>onboard resources</i> to the <i>printer</i> .
		4.5.1 <i>Self-configuration</i>	To set operating mode for <i>network 1</i> . Procedure that scans <i>network 1</i> to find Televis devices connected.
		4.5.2 -----	
		4.5.3 -----	
		4.5.4 <i>General Info</i>	Displays information on <i>network 1</i> configuration.
		4.5.5 Devices	Displays information on devices connected to Televis <i>network 1</i> and allows part of this data to be modified.
	4.5.6 <i>Print Config.</i>	Sends configuration data for <i>network 1</i> to the <i>printer</i> .	
	4.6 -----		

ADV. CONFIGURATION		Password-protected menu ('Advanced')	
5 Advanced Configuration	5.0 Display	5.0.0 Static text	Fixed display of all analogue and digital values read. List can be scrolled manually using the UP and DOWN <i>keys</i> .
		5.0.1 Rotating text	Display with automatic scroll of list of analogue and digital values read.
	5.1 Alarms	5.1.0 Exclusion times	To set alarm exclusion times for alarm activation, acknowledgment and start of data-logging.
		5.1.1 Buzzer & <i>Leds</i>	To set the alarm operating mode buzzers and <i>LEDs</i> .
		5.1.2 Digital Output 1	To set the operation mode of Out1 alarm output.
		5.1.3 -----	
	5.2 <i>Printer</i>		To set <i>printer</i> operation.
	5.3 <i>LCD & Buzzer</i>		To set LCD and buzzer operation.
	5.4 <i>Network 1</i>		To set general operating parameters for <i>network 1</i> in televis master mode.
	5.5 -----		
	5.6 <i>Network 3</i>		To set <i>Network 3</i> protocol.
5.7 -----			
5.8 <i>Passwords</i>		To set <i>passwords</i> .	
SYSTEM INFO			
6 System Info		To view system information.	

2.4.1.1 First switch on

This page appears when the device is switched on for the first time.

After this, you can access this menu from menu 4 - *Standard Configuration* (sub-menu 4.0 *First Switch On* and "force" the *First Switch On* function).

* <i>First switch on</i> *	
Language	Italian
YYYY/MM/DD:	<data>
HH:MM:SS :	<ora>
REC. period	min : 000
EN12830:	<=24h / 30s
Number of of probes used:	8

* <i>First switch on</i> *	
Number of Digitals used	2

It is highly recommended to configure:

- Language (either Italian, English, French, German or Spanish).
- Date (yy/mm/dd) format and time (hh:mm/ss).
- Recording period, expressed in minutes.

Value REC period	
000	30 seconds
001	1 minute
002	2 minutes
...	...
099	99 minutes
100	100 minutes
...	...

Based on the recording period set, line below shows the degree of conformity with UNI EN 12830 in real time.

EN12380	
<=24h / 30s	
<=24h	
<=7dd	
Storage	
> 7 dd	
OUTSIDE EN12380	

Furthermore, if the device has onboard inputs, the following will be displayed:

- The actual number of *Analogue Inputs*.
- The actual number of *Digital Inputs*.

2.4.2 To set password (menu 5.8 Passwords)

Levels of visibility

Three password levels can be set **exclusively from the 5.8 *PASSWORDS*** menu.

5.8 <i>PASSWORDS</i>	
PSW REC	0
Standard PSW	0
Advanced PSW	99


- The REC PSW (range 0...255) allows you to protect the start or suspension of data logging.
- The standard PSW (range 0...255) allows you to restrict access to the '**Std. Configuration**' menu.
- The advanced PSW (range 0...65535) allows you to restrict access to the '**Adv. Configuration**' menu.

N.B.: Default values = 0 for all three *passwords*.

In the example, the Advanced PSW is set to 99. Obviously the 3 *passwords* can all be different.


If you prefer, you can restrict access to menu 5 Adv. Configuration with a password. Then only an Advanced PSW holder will be allowed access to be able to modify all three *passwords*.

2.4.3 0 – Suspend

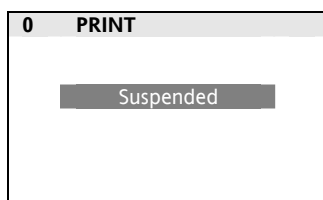


The **0 – Suspend** menu allows you to suspend a current print job. Press the OK key to suspend a print job. The Print LED will switch off if it was on.

2.4.4 1 – Rec On/Off

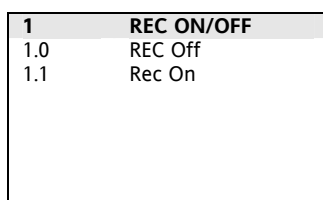

The **1 – Rec On/Off** menu allows you to start or suspend data logging for I/O resources. The menu is password-protected - see the section on how to set the Password. NOTE: Some functions/sections in the following menus are not modifiable when data logging is underway. The following message will appear in this case:

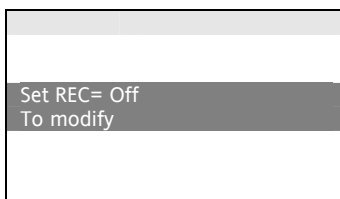

2.4.5 2 – Data

See [Printer](#) section.

2.4.6 3 – Alarms

See [Alarms](#) section.

2.4.7 4 – Std. Configuration

See [Standard Configuration](#) section.

2.4.8 5– Adv. Configuration

See [Advanced Configuration](#) section.

2.4.9 6 - System Information

6 SYSTEM INFO	
Part numbers	148
Software version	
Release date	dd/mm/yy
Operating System	
Total Memory	Kb
Free memory	%
Serial Number	

Menu **6- System Information** is read-only and provides [general information](#) on:

- Part numbers.
- Software version.
- Release date of software version, in dd/mm/yy format.
- Version of Operating System.
- Total memory in Kb.
- Total free memory as a percentage.
- Serial number.

3 ALARMS

The **3-ALARMS** menu provides access to the list of *alarms* to view, print or reset them.

3	ALARMS
3.0	Active <i>Alarms</i> List
3.1	-----
3.2	<i>Print alarm log</i>
3.3	<i>Clear log</i>

3.0 List of active *alarms*

3.0 ACTIVE ALARMS	
Alarm:	001 / 004
◀ All	ONBOARD – D1
◀ All	ONBOARD – D2
◀ HigE	ONBOARD – P1
◀ HigE	ONBOARD – P3
<i>ONBOARD RESOURCES</i>	
DD: 02 HH: 05:11:38	

From the **3.0 Active Alarms** menu, you can view a list of all active *alarms*:

- Alarm: indicates the number of the active alarm (highlighted) / total number of active *alarms*. In the example 001/004 (1 of 4) active *alarms*; the highlighted alarm is the onboard digital input 1.
- The list of all active *alarms* follows (if there are more than 4 *alarms*, use the UP and DOWN keys to see them all).
- The last two lines (highlighted) show the type of resource (onboard, network) and the date (DD), hours, minutes and seconds (HH) of the start of the highlighted alarm.

3.1 Not used

3.2 Print alarm log

3.2 PRINT ALARMS	
Do you want to print ?	
^ =Yes v= No	

Menu from which to print *alarms*.

3.3 Clear log

3.3 RESET PRINT TO	
PASSWORD	000

Password-protected menu.

Menu to clear (reset) the alarm log.

It is highly recommended that you print the full alarm list (see 3.2) before doing this. In this way, print 3.2 will only print out the *alarms* that haven't already been printed.

4 STANDARD CONFIGURATION

From the General menu, *use* the UP and DOWN *keys* to select option 5 then press the OK key to open the "**Standard Configuration** menu. The following page will open on the display, after the correct PASSWORD has been entered**:

Example A: data logging underway.

4	STD CONFIGURATION
4.0	-----
4.1	Clock & Lang
4.2	<i>Plant</i>
4.3	-----
4.4	<i>Onboard resources</i>
4.5	<i>Network 1</i>
4.6	-----

Example B: data logging interrupted.
Menu 4.0 is visible in this case only.

4	STD CONFIGURATION
4.0	< <i>First switch on</i>
4.1	Clock & Lang
4.2	<i>Plant</i>
4.3	-----
4.4	<i>Onboard resources</i>
4.5	<i>Network 1</i>
4.6	-----

The **4 -Std Configuration** menu allows you to set the functions described below.

**The menu is password-protected - see the section on how to set the Password.

We recommend you protect the menu with a password that is known to authorized personnel only; in fact, all three *passwords* and advanced functions and parameters can be modified from this menu.

4.0 *First switch on*

**Menu 4.0 is password-protected - see the section on how to set the Password.

For a more detailed description see the User Interface section - *First switch on* paragraph.

* <i>First switch on</i> *	
Language	Italian
YYYY/MM/DD:	<data>
HH:MM:SS :	<ora>
REC. period	min :
EN12830:	<=24h / 30s
Number of of probes used:	8

* <i>First switch on</i> *	
Number of Digitals used	2
Reset system	0000H

NOTE: unlike the first real switch on, from this menu you can also reset the system using the '**Reset System**' field.
You are advised to contact Eliwell Technical Support before doing this.

IMPORTANT: if you exit this menu using the Menu key, the device will be automatically rebooted. The following window appears:

Waiting to reset

LOADING

IMPORTANT: You will NOT be asked to confirm the recording of any data modified;

4.1 Clock and Language

4.1	CLOCK&LANGUAGE
YYYY/MM/DD:	<data>
HH:MM:SS :	<ora>
Language	Italian

>From this menu you can set the date, time and navigation language.
Languages available: Italian, English, Spanish, German or French.

4.2 Plant

4.2	PLANT
Name of unit	DATA LOGGER
REC. period	min : 000
EN12830:	<=24h / 30s

>From this menu you can set:

- Datalogger name '**Unit Name**':
- Record period '**REC. period**'
 - 000 indicates a 30-second record period.
 - 001 indicates a 1-minute record period.
 - 002 indicates a 2-minute record period, and so on.

On changing the recording period, in real time the line below shows the degree of conformity with UNI EN 12830 (see [First Switch On](#)).

4.3 Not used

4.4 Onboard resources

Models with printer

4.4	ONBOARD RESOURCES
4.4.0	<i>General Info</i>
4.4.1	<i>Analogue Inputs</i>
4.4.2	<i>Analogue Alarms</i>
4.4.3	<i>Digital Inputs</i>
4.4.4.	<i>Digital Alarms</i>
4.4.5	<i>Print config.</i>

Models with no printer

Note that menu 4.4.5 is not available.

4.4	ONBOARD RESOURCES
4.4.0	<i>General Info</i>
4.4.1	<i>Analogue Inputs</i>
4.4.2	<i>Analogue Alarms</i>
4.4.3	<i>Digital Inputs</i>
4.4.4.	<i>Digital Alarms</i>
4.4.5	-----

>From this menu, you can

- To set the number and features of Analogue and/or *Digital Inputs*.
- Print Analogue and Digital Input configuration (*models* with *Printer* only, see Annexe A).

4.4.0 *General Info*

4.4.0	GENERAL INFO
Number of of probes used:	8
Number of Digitals used	2

4.4.1 Analogue Inputs

This menu shows the list of onboard *analogue inputs*.

4.4.1 ANALOGUE INPUTS	
01	ONBOARD-P1
02	ONBOARD-P2
03	ONBOARD-P3
04	ONBOARD-P4
05	ONBOARD-P5
06	ONBOARD-P6
07	ONBOARD-P7

4.4.1 ANALOGUE INPUTS	
08	ONBOARD-P8

Select the required analogue input using the UP and DOWN *keys* and press OK.
A page displaying the following information will open:
(example Index 01 Input, pressure probe).

4.4.1 ANALOGUE INPUTS	
Index	1/8
Name	ONBOARD-P1
Probe type	4..20mA
Unit of measure Bar	
Decimal points	1
Value = 04mA	0.0

4.4.1 ANALOGUE INPUTS	
Value = 20mA	30.0
Read	13.3
View Text	YES

- **Index:** Input Index***
- **Name:** Name of Input. The default names are **ONBOARD-P1 .. ONBOARD-P8** and can be modified as required (max. 10 characters)
- **Probe type:** set automatically between [**4...20mA** and **NTC 103AT**]
- **Unit of Measure :** see *Units of Measure table*
- **Decimal Points :** values [0...3] for 4..20mA, [0...1] for NTC
- If **Probe Type = 4...20 mA :**
 - **Value = 04 mA:** indicates start of scale
 - **Value = 20 mA** indicates full scale
- If **Probe Type = NTC :**
- Minimum Value***
- Maximum Value***
- **Read** Value read in real time***
- **View Text :** if **YES** then the value is entered in a list of elements to be viewed in **Default View**.

*** Read-only information.

4.4.2 Units of Measure table

Label	Unit of Measure
C	Degrees Celsius
F	Degrees Fahrenheit
Bar	Pressure (Bar)
RH	Relative humidity
<nessuna>	>Nessuna>
Pa	Pressure (Pascal)
Bin	Binary
Psi	Pressure (PSI)
V	Volts
A	Amps
Hz	Hertz
h	
Kwa	
Kwr	
Cos	

4.4.3 Analogue alarms

This menu shows the list of onboard *analogue inputs*.

4.4.2 ANALOGUE ALARMS	
01	ONBOARD-P1
02	ONBOARD-P2
03	ONBOARD-P3
04	ONBOARD-P4
05	ONBOARD-P5
06	ONBOARD-P6
07	ONBOARD-P7

4.4.2 ANALOGUE ALARMS	
08	ONBOARD-P8

Select the required analogue input using the UP and DOWN *keys* and press OK.
A page displaying the following information will open:

(example Index 01 Input, pressure probe)

4.4.2 ANALOGUE ALARMS	
Index	1/8
Name	ONBOARD-P1
Alarm Output	1
Delay (min) 0	
Positiv. Emerg.	10.0
Positiv. Delay	8.0

4.4.2 ANALOGUE ALARMS	
Negativ. Emerg.	0.0
Negativ. Delay	0.0
Alarm Hysteresis	0.1

- **Index:** Input Index***
- **Name:** Name of Input***
- **Alarm Output :** 0=none associated; 1=Output 1;
- **Delay (min):** minutes delay before activating Alarm Output [0...31 min]
- **Positiv. Emerg:** upper threshold and immediate generation of alarm when limit exceeded
- **Positiv. Delay:** upper threshold and delayed generation of alarm when limit exceeded
 - **NOTE:** Positiv. Emerg. > Positiv. Delay
- **Negativ. Delay:** lower threshold and delayed generation of alarm when lower limit exceeded
- **Negativ. Emergency:** lower threshold and immediate generation of alarm when lower limit exceeded
 - **NOTE:** Negativ. Emerg. < Positiv. Delay
- **Alarm Hysteresis:** Alarm reset hysteresis.

*** Read-only information.

Notice : alarm thresholds and hysteresis values are expressed in the *units* of measure listed above (point 4.4.1 for the Analogue Input).

4.4.4 Digital Inputs

This menu shows the list of onboard *digital inputs*.

4.4.3 DIGITAL INPUTS	
01	ONBOARD-D1
02	ONBOARD-D2

Select the required digital input using the UP and DOWN *keys* and press OK.

A page displaying the following information will open:

(example Index 01 Input).

4.4.3 DIGITAL INPUTS	
Index	1/2
Name	ONBOARD-D1
Default state NC	
Read	Open
View Text	YES

- **Index:** Input Index***
- **Name:** Name of Input. The default names are **ONBOARD-D1 .. ONBOARD-D2** and can be modified as required. (number. 10 characters).
- **Default State :** compressor relay. (Normally Open) or NC (Normally Closed).
- **Read:** Real-time reading of state of input (done before reading is reversed as a result of previous **Default State**)***
States are: **Closed or Open.**
- **View Text :** if **YES** then the value is entered in a list of elements to be viewed in **Default View.**

*** Read-only information.

4.4.5 Digital alarms

This menu shows the list of onboard *digital alarms*.

4.4.2 DIGITAL ALARMS	
01	ONBOARD-P1
02	ONBOARD-P2

Select the required digital input using the UP and DOWN *keys* and press OK.
A page displaying the following information will open:
(example Index 01 Input, pressure probe).

4.4.4 DIGITAL ALARMS	
Index	1/8
Name	ONBOARD-D1
Alarm Output	1
Delay (min)	0

- **Index:** Input Index***
- **Name:** Name of Input***
- **Alarm Output :** 0=no output enables or 1= **Output 1** , 2= **Output 2**
- **Delay (min):** minutes delay before activation of **Alarm Output**.

*** Read-only information.

4.4.6 Print config.

4.4.5 ONBOARD CONFIGURATION	
Do you want to print ?	
^=Yes v=No	

>From this menu you can print the configuration of onboard inputs (see *Printer* section).
See section.

4.5 Network 1

N.B.: This menu is for *use* by authorized personnel only. In fact, the network of compatible Televis devices connected via *RS485* to Memory 1000 can be modified from this menu.

4.5 NETWORK 1	
4.5.0	Network Mode
4.5.1	<i>Self-configuration</i>
4.5.2	-----
4.5.3	-----
4.5.4	<i>General Info</i> *
4.5.5	<i>units</i>
4.5.6	<i>Print config.</i> *

Menu available in *models* with *RS485* only.

This menu allows you to configure '*Network 1*' or the network of compatible Eliwell Televis devices connected via serial port *RS485* to Memory 1000.

1.5.0 Network Mode

4.5.0 NETWORK 1 MODE	
Change data	
Delete	Network configuration
Network type:	Televis
Network address	14:14
Max. <i>units</i>	15

Values modifiable only if REC= Off

- **Network type:** can be **Disabled** or **Televis**
- **Network address:** set network address (MASTER Televis)

4.5.1 Self-configuration

4.5.1	SELF-CONFIGURATION
Change data	
Delete	Network configuration
Network type:	Televis
Last	Address 0:1
First	Address 0:1

Automatic procedure to recognize compatible Eliwell Televis devices connected via the *RS485* serial port to Memory 1000. The procedure may take a few minutes to self-configure depending on the number of devices in the network.

- **Last address:** set the value for the **first** address assigned to devices in the network.
- **First address:** set the value for the **last** address assigned to devices in the network.

NOTES:

- Network configuration is automatic.
- When adding or removing instruments from the network, repeat the *self-configuration* procedure.
- A number of messages confirming successful or failed network recognition/configuration, and any error messages will be displayed. Follow the instructions on the display.
- On completion of configuration, menu 4.5.1 will no longer be accessible.

4.5.2 Not used

4.5.3 Not used

4.5.4 General Info

Read-only menu to view the number of devices found in the network and the *Analogue Inputs* read by the network. Example (4 devices and 6 Inputs (3 the first – see *Device Analogue Inputs* section, 2 the second, 1 the third)):

4.5.4	NETWORK	1
	GENERAL	
Total no. of <i>units</i>		4
Inputs enabled		6

4.5.5 Units

Menu showing the List of Devices, and giving the names of Compatible Televis Devices configured for *Network 1*.

4.5.4	NETWORK 1 UNITS
00.01	N1-F.0-D.1
00.02	N2-F.0-D.2
00.03	N3-F.0-D.3
00.04	N4-F.0-D.4

Each element in the List of Devices includes the Name of the Device (example Nx) and the Televis address in format Televis (F:D).

Select the required Device (example 00.01) using the Up and Down *keys* and press OK.

A menu will open listing the following:

4.5.4	NETWORK 1 UNITS
Unit Index	01/04
Address	0:1
Unit managed	YES
Name	
Alarm 1 output	
Probe info	>>>

Total devices: (read only)

- **Unit Index** : **
- **Address** : ** Televis address in F:D format, resulting from the *self-configuration* procedure.
- **Unit Managed** : ** YES if the *self-configuration* process is able to read data from the device, otherwise NO.
- **Name** (max 10 characters)
- **Alarm Output** : 0=no output enabled, 1=Output 1 or 2=Output 2
- Probe info >>> Next menu (press OK)

5 ADVANCED CONFIGURATION

From the General menu, *use* the UP and DOWN *keys* to select option 5 then press the OK key to open the "Standard Configuration" menu. The following page will open on the display:

NOTE: The menu is ALWAYS static; to see 5.7 and 5.8 click the DOWN key.

5	ADVANCED CONFIGURATION	5	ADVANCED CONFIGURATION
5.0	View	5.7	-----
5.1	<i>Alarms</i>	5.8	<i>Passwords</i>
5.2	<i>Printer</i>	5.9	-----
5.3	<i>LCD & Buzzer</i>		
5.4	<i>Network 1</i>		
5.5	-----		
5.6	<i>Network 3</i>		

Menu 5 –*Advanced Configuration* allows you to configure the functions described below; these functions are used and modified less often than those described in the section entitled *Standard Configuration*.

The menu is password-protected - see the section on how to set the Password.

We recommend you protect the menu with a password that is known to authorized personnel only; in fact, all three *passwords* and advanced functions and parameters can be modified from this menu.

5.0 View

5.0.0 Static text	Fixed display of all analogue and digital values read. You can scroll this list using the UP and DOWN <i>keys</i> .
5.0.1 Rotating text	Display with automatic scroll of the list of analogue and digital values read.

5.1 Alarms

5.1	ALARMS
5.1.0	Exclusion times
5.1.1	Buzzer & <i>Leds</i>
5.1.2	Digital output 1
5.1.3	-----

5.1.0 EXCLUSION TIMES	5.1.1 BUZZER & <i>LEDS</i>	5.1.2 DIGITAL OUTPUT 1
Switch on (mins) 1	BUZZER	Enabled
Acknowledge (mins) 1	Disabled	Switches off when acknowledged
REC On (min) 1	Switches off when acknowledged	Off if 'REC' is Of
	Off if 'REC' is Of	Normally Open
	LED IN ALARM	
	On	

From this menu you can set:

- 5.1.0 Alarm exclusion times in minutes
 - On switching on
 - By acknowledging
 - During data logging
- 5.1.1 BUZZER and ALARM LED functions (shown in UPPER CASE)
 - Enable Buzzer (Yes/No)
 - Buzzer off/on during acknowledgment
 - Buzzer off/on if data logging is NOT active
 - ALARM LED on or blinking in the event of active *alarms*
- 5.1.2 Alarm output (Out1)
 - Enable output (Enabled / Not enabled)
 - Output off/off during acknowledgment
 - Output off/on if data logging is NOT active
 - NA or NC contact

5.2 Printer

Menu visible in *models* with integrated *printer* only.

See *Printer* section.

5.3 LCD & Buzzer

5.3	LCD & BUZZER
Illuminated LCD	Yes
Light level	3
Polarized level	2
Buzzer	No

From this menu you can set:

- LCD always illuminated (Yes/ No)
- Light level (range 0...7) Default 3
- Contrast level (range 0...7) Default 3
- Buzzer active (Yes/ No)

5.4 Network 1

Definition: [Network 1](#) = [RS485](#) to expand inputs

5.4	NETWORK PARAMETERS
Timeout (mS)	640
Attempts	3
Alarm time (S)	
Network 1 & 2	30

Menu available for [models](#) with [RS485](#) only

From this menu, you can set the operating parameters for [Network 1](#).

See the [self-configuration procedure too](#) :

- **Timeout (ms)** : value of the timeout for the response from controllers.
- **Attempts** : from 0 to 3 = number of times the Televis slave tries to send data before generating a 'No-Lnk' error (value 0=one attempt, 3=four attempts).
- **Alarm time (s)** ([Network 1](#) & 2) : values from 10 to 300 seconds in 10-second steps = sets the frequency with which the Datalogger runs a full network scan of alarm states in each resource.

5.5 Not used

5.6 Network 3

Definition: [Network 3](#) = [RS232](#) port to download data

5.6	NETWORK PARAMETERS
Network type:	Modbus Slave
Baud Rate	9600
Slave 210 address	

Menu available for [models](#) with [RS232](#) only

From this menu, you can set the communication network for [Network 3](#):

To ensure the data download software runs correctly, leave the original configuration as shown in the example.

5.7 Not used

5.8 Passwords

5.8	PASSWORDS
PSW REC	0
Standard PSW	0
Advanced PSW	99

See User Interface section.



5.9 Not used

6 PRINTER

The print function is available in *models* with printers only. See Annexe A..


6.1 Keys

There are 2 *keys* on the front panel of the integrated *printer*.

Key	Description Key	Press once (press and release)	Press and hold	Menu / Comments
	Paper Feed	<ul style="list-style-type: none"> Paper feed 	--	
	Switch ON	Switches the <i>printer</i> on	--	
	Pause	<ul style="list-style-type: none"> Suspends print job (Pause) Restarts suspended print job 	--	
	Switch OFF	--	Switches the <i>printer</i> off	If a print job is underway, it will be suspended (repeat print procedure)

6.2 LEDs

There is a single LED to indicate *printer* status.

Icon		Colour	Permanently on	Blinking	Comments
	<i>Printer</i> status	Green	<ul style="list-style-type: none"> <i>Printer</i> switched on from key Printing 	<ul style="list-style-type: none"> Print job suspended manually from key No paper <i>Printer</i> error 	

6.3 Printer Configuration

The format for data entry is defined in Menu 5.2 *Printer*. See also section 5 *Advanced Configuration*.

5.2	PRINT PROPERTIES
A4	Landscape
Analogue	
Daily	
Start from Sunday	
Rotate print YES	

>From this menu you can set:

- Paper size (A4 landscape in example). Defaults are A4, B4 landscape/portrait and A3.
- Data type (for Graph print only, see [menu 2.2 Graph Print](#)).

	PRINT		
	VALUE READ	ALARM BAND DELAY	ALARM BAND EMERGENCY
Analogue	Yes	No	No
Analogue & Alarm	Yes	Yes	No
Analogue & All & Emer	Yes	Yes	Yes

- Print frequency (weekly or daily).

	Print data interval	[Start	End]	Print resolution
Daily	Data for 1 day	Time 00:00 Selected day	Time 23:59 Selected day	15 mins
Weekly	Data for one week	Time 00:00 First day of the week (°)	Time 23:59 Last day of the week (°)	2h 30 secs

- (°) Week starts (Sunday or Monday).
- Print rotated by 180°.

6.4 Print menu

Print jobs can be started/suspended the *printer* configured from the following menus: (you are referred to the dedicated paragraphs for a more detailed description of each menu).

MENU		N.B	See paragraph/section
1 Rec On / Off		Suspends print job Password-protected MENU	
2 Data	2.0 Periods		Menu 2.0 Periods
	2.2 Graph print		
	2.3 Print text		
3 <i>Alarms</i>	3.2 Alarm log print		Section 3 <i>Alarms</i>
4 Std Configuration		4.4.5 Print Config.	This menu is visible if the corresponding resources are visible Section 4 <i>Standard Configuration</i>
		4.5.6 Print Config.	Check that the <i>self-configuration</i> process has been run Section 4 <i>Standard Configuration</i> 6.5.4 <i>Example of Print Network 1 Configuration</i>
5 <i>Advanced Configuration</i>	5.2 <i>Printer</i>	<i>Printer Configuration</i> Password-protected MENU	6.3 <i>Printer Configuration</i>

6.4.1 Menu 2.0 Periods

2.0 REC PERIODS	
02/06/07	-> 02/06/07
0406/07	-> 0506/07
10/6/07	-> 1/06/07
13/6/07	-> 20/06/07
22/06/07	-> 24/06/07
24/06/07	

Menu 2.0 Periods displays all saved data for print preview purposes along with associated recording intervals.

Start recording time (Rec On) is indicated on the left, and end recording time (Rec Off) on the right.

N.B.: If the device is currently recording data, the last line will have a start recording date but not an end recording date. Up to 7 recording periods are displayed.

6.4.2 Menu 2.2 Graph Print

2.2 GRAPH PRINT	
2.2.0	Onboard resources
2.2.1	Network 1
2.2.2	-----

Menu 2.2 Graph Print enables you to print data for an onboard/network resource in graph format.

For example, select the **2.2.0 Onboard Resources** menu:

2.2.0 ONBOARD GRAPH	
Start date:	
YYYY/MM/DD	2007/05/24
Analogue	
Day	
	>>>

- Select the start recording date.
- Select the type of data to print.
- For the print period, select from.
 - **Day**: daily; print from 00.00 on the selected date to 23.59 on the same day.
 - **Week**: weekly; print from 00.00 on the first day of the week to 23.59 on the last day of the week.
- >>> Move to the next page to select the input and confirm the print request.

6.4.3 2.3 Print text


Menu **2.3 Print Text** allows you to print data for onboard/network resources as text.

Same configuration as menu 2.2 (there is no Type of data to print option -see section **5.2 Printer**).

6.5 Examples of prints

N.B.: This is in reverse order compared to a real print, i.e. for Ø 30mm x57mm (integrated *printer*) thermal paper the print reads from the bottom to the top.

6.5.1 Example of graph

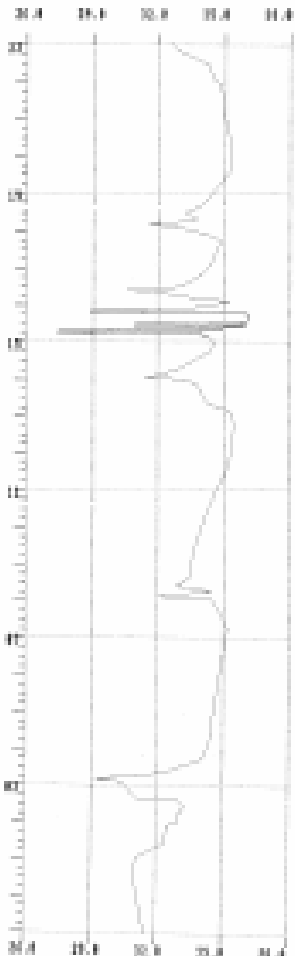Example of print	Description
<p>D A TA LOGGER Page 01 12/02/2007 Time 16:51 Device code 0001H 0001H Daily print 2/06/2007 Probe: ONBOARD P7 (C)</p>	<p>Print header The header appears:</p> <ul style="list-style-type: none"> • at the start of each print; • at the top of each new page. <p>The header includes:</p> <ul style="list-style-type: none"> • The product name and page number • Start print date and time • The serial number of the device • The type of print (daily/weekly) and start print date <ol style="list-style-type: none"> (1) Name of probe and unit of measure (2) Timer alarm thresholds (3) Emergency alarm thresholds (4) Acknowledge alarm indicator
	<p style="text-align: center;"><i>Example of graph</i></p>

6.5.2 Print text example

Example of print	Description
<pre> DATA LOGGER Page 01 12/02/2007 Time 15:38 Device Code 0000H 004CH Daily print 12/02/2007 (1) Probe: N0-P4 (C) (2) Alarm thresholds: -10.0 10.0 (3) Emergency thresholds : -20.0 20.0 (5) Alarm acknowledged </pre>	<p>IPrint header (see graph print)</p>
<pre> Date Time (1) (2)(3)(4)(5) ----- - 12/02/07 00:00 10.0 . . - . 00:01 10.5 * . - . 00:02 11.4 * . - . 00:03 11.7 * . - . 00:04 11.6 * . - . 00:05 10.9 * . - . 00:06 10.9 * . - . 00:07 11.0 * . - . 00:08 10.7 * . - . 00:09 10.5 * . - . 00:10 10.8 * . - . (continued) </pre>	<p>The print columns display (from left to right):</p> <ul style="list-style-type: none"> • Reading date • Reading time • Reading (in the unit of measure selected for the analogue input) • An asterisk '*' if the reading is below the negative delayed alarm limit or the negative emergency alarm limit. • An asterisk '*' if the reading is above the positive delayed alarm limit or the positive emergency alarm limit. • <i>Not used</i> • An "*" if the user has performed the alarm acknowledgment function by pressing the key
<p>End of print</p>	<p>At the end the following message appears</p> <p>End of print</p>

6.5.3 Example of Print Onboard Resource Configuration

Example of print	Description
<pre> DATA LOGGER Page 01 12/02/2007 Time 13:56 Device Code 0000H 004CH Print Device Configuration </pre>	<p>Print header</p> <p>The header appears:</p> <ul style="list-style-type: none"> • at the start of each print; • at the top of each new page. <p>The header includes:</p> <ul style="list-style-type: none"> • The product name and page number • Start print date and time • The serial number of the device • The type of configuration being printed, which can be either: Onboard Resource or <i>Network 1</i> • The date and time the print configuration was created/edited
<pre> ***** Onboard resources ***** Date : 12/02/2007 Time: 13:56:50 ANALOGUE INPUTS Inputs available: 8 Inputs managed: 2 DIGITAL INPUTS Inputs available: 2 Inputs managed: 2 Analogue input : 1 ----- Connector/Terminal: AI01 Probe type: 4..20 mA Unit of Measure : Bar Decimal Points : 1 Probe name: CONDENSING Min. value : 0.0 Max. value : 30.0 Alarm Output : 1 Delay (m) : 0 Alarm hysteresis: 0.1 Posit. Emerg. : 10.0 </pre>	<p>Print Configuration is organised hierarchically to make it easier to understand:</p> <ul style="list-style-type: none"> • Total number of <i>analogue inputs</i> available and managed • Settings for <i>Analogue Inputs</i> • ...and for <i>Analogue Alarms</i>

<pre> Posit. Delay: 8.0 Negat. Delay: 0.0 Negat. Emerg. : 0.0 Analogue input : 2 ----- Connector/Terminal: AI02 Probe type: 4..20 mA Unit of Measure : Bar Decimal Points : 1 Probe name: SUCTION Min. value : -0.5 Max. value : 7.0 Alarm Output : 1 Delay (m) : 0 Alarm hysteresis: 0.1 Posit. Emerg. : 7.0 Posit. Delay: 6.5 Negat. Delay: 0.0 Negat. Emerg. : 0.0 Digital input : 1 ----- Connector/Terminal: AI03 Default State : N.A. Name : NO-D1 Alarm Output : 1 Delay (m) : 0 Digital input : 2 ----- Connector/Terminal: AI04 Default State : N.C. Name : NO-D2 Alarm Output : 1 Delay (m) : 0 </pre>	<ul style="list-style-type: none"> • Settings for <i>Digital Inputs</i> and • <i>Digital alarms</i>
<p>End of print</p>	<p>At the end the following message appears</p> <p>End of print</p>

6.5.4 Example of Print Network 1 Configuration


Example of print	Description
<pre> Nome Sonda : N1F001P2... Punti Decimali : 1 Unita' di Misura : C Sonda Abilitata : NO ----- Ingresso Analogico : 3 Nome Sonda : N1F001P2... Punti Decimali : 1 Unita' di Misura : C Sonda Abilitata : SI ----- Ingresso Analogico : 2 Nome Sonda : N1F001P1... Punti Decimali : 1 Unita' di Misura : C Sonda Abilitata : SI ----- Ingresso Analogico : 1 Nome Unita' : N1-F-A-D-1 # - 16bit 12 Complemento a 2 Tipo Analogico : Sottocodice Drive : 2 Codice Drive : 2 Codice Unita' : 1829 Codice VER : 2 Codice MSK : 100 Indir. di Rete: 0:1 Alfano : 16 Ingressi Abilitati : 2 Ingressi Analogici : 3 Unita' Abilitata : SI ----- Indice Unita' : 1 ----- Ingressi Abilitati : 6 Unita' Configurata : 4 Unita' Trovata : 4 Ora : 14:52:06 Data : 26/06/2007 Ultimo Indirizzio : 0:3 Primo Indirizzio : 0:0 Max. Unita' : 15 Tentativi : 3 Time Out (s) : 600 Indir. di Rete: 14:14 Tipo Rete : Televis ----- Configurazione Rete : 3 ----- Stampa Configurazione Unita' Codice Unita' : 00000 00000 27/06/2007 Ora : 15:21 DATA LOGGER Pagina 01 </pre>	<p>Print Configuration is organised hierarchically to make it easier to understand:</p> <ul style="list-style-type: none"> • Network 1 Configuration (Type, Network Address, Units Found / Configured, Inputs Enabled, etc.) <ul style="list-style-type: none"> ○ Unit 1 Index (unit enabled YES/NO, Analogue Inputs/Enabled), Alarms, Network Addresses, MSK/VER codes, etc.) <ul style="list-style-type: none"> ▪ Analogue Input 1 (Probe Enabled YES/NO/UM decimal points, etc.) ▪ Analogue Input 2 ▪ Analogue Input 3 ○ Unit Index 2 <ul style="list-style-type: none"> ▪ Analogue input 1 ▪ Analogue Input 2 <p>Etc.</p>
End of print	At the end the following message appears End of print

6.5.5 Legibility on thermal paper

N.B.: when the paper length reaches 210mm (the length of an A4 sheet), the **printer** inserts a page break so the print can be photocopied to a sheet of A4 and filed. We recommend you photocopy all data printed if you want to retain a copy for your records; data printed on thermal paper will gradually become illegible.

6.6 Printer Errors

At the start of or during a print job, a number of problems may occur with the **printer**. These have been listed in the table below:

Message	CAUSE	EFFECTS	REMEDY	N.B.
	No data to print	No print		LED  permanently on
Printer LED blinking	Out of paper	No print	Replace paper roll	
Printer LED blinking	Printer not connected	No print		
Printer LED permanently on	Printer error	No print		
Printer LED permanently on	Print job suspended manually	Print suspended	Take out the paper roll and repeat the print procedure.	

7 MEMORY 1000 DATA MANAGER


7.1 Introduction

Eliwell provides Memory 1000 DataManager software to enable users to access data recorded by Memory 1000 from a PC. The system was designed to enable users to view both real time and historical data and *alarms*.

7.2 System requirements (Memory 1000)

A Memory 1000 model with RS232 is required. See Annexe A.

7.3 System requirements

Hardware Minimum configuration	Operating System	CD MEMORY 1000 DATAMANAGER
<ul style="list-style-type: none"> Pentium 200 MHz RAM: 256 MB Available HDU: 300MB 1 free COM 	<ul style="list-style-type: none"> Windows 98 Windows 2000 Windows XP PRO Home / Professional 	 <p>Version 1.0 or later</p>

7.4 Installing the Memory 1000 DataManager CDROM

	Or:
Insert the CDROM. The CD will start automatically. If it doesn't <ul style="list-style-type: none"> Click the Start button Click the Run button Write E: "\xxx.EXE" in the text box where "E" is the CD drive 	<ul style="list-style-type: none"> Click "My Computer" Click the CD (or DVD) drive (E:) where "E" is the CD/DVD drive. The following message will appear: Click xxx.EXE

7.5 Opening screen



>From the *opening screen*, you can

a) Open the following pages:


- List of plants** : to choose which *plant* to download information from.
- Download data**: to establish a connection between the PC and Memory 1000 (including).
- Graphs/Tables** : to generate graphs/tables from data downloaded.
- Historical alarm log** : lists all *alarms* recorded by Memory 1000 in the selected period.
- Control panel** : configuration parameters to export data and selection of application language.

b) Exit program

7.6 Navigation bar


Icon	Description	Screen	Icon	Description	Screen
			 Chart	Graphs Switch to graphic display	Tables
 Quit	Escape Exit program (Log-out)	starting	 Data table	Table Switch to table format	Graphs
 Minimize	Minimize To reduce to an icon	All	 Coordinates	X,Y values	Graphs Tables
 Back	Go back Go back to the previous screen	All except from the starting screen	 Save profile	Save profile View x,y values for graph	Graphs Tables
 Connect	Connect Connect Memory 1000 to PC	<i>Serial data</i>	 Export	Export Export data to file .scv (table) in accordance with settings in <i>control panel</i> .bmp (graph)	Graphs Tables
 Download	Transfer Data transferred from Memory 1000 to PC	<i>Serial data</i>	 Print	Print Print data	Graphs Tables
 Scan	Find Find Memory 1000 on any of the available COMs	<i>Serial data</i>	 Zoom	Zoom To enlarge a portion of the graph (x-axis only)	Graphs
			 Configuration	Configuration	Graphs Tables

7.6.1 Control panel

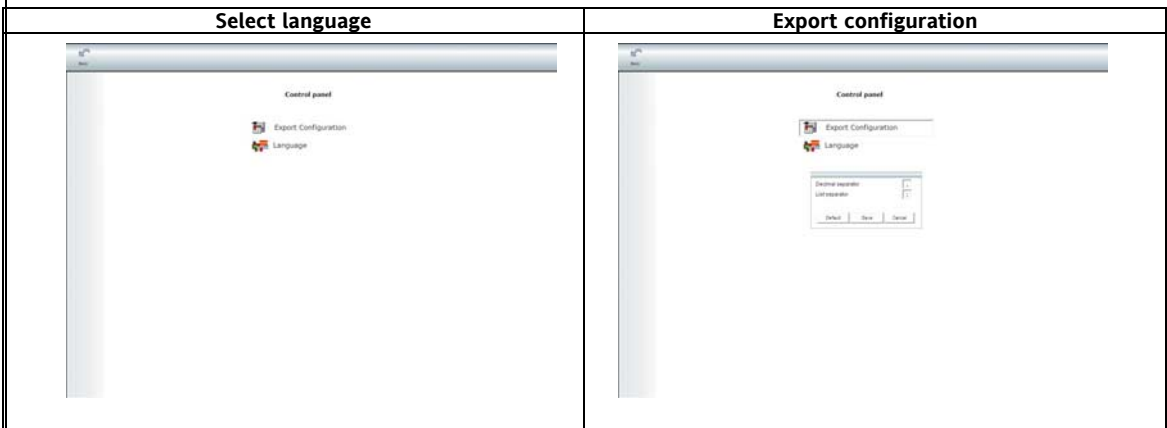


- Select the application language (Italian, English, Spanish, German, French and Portuguese).
- Select the type of export.

7.6.2 Serial data

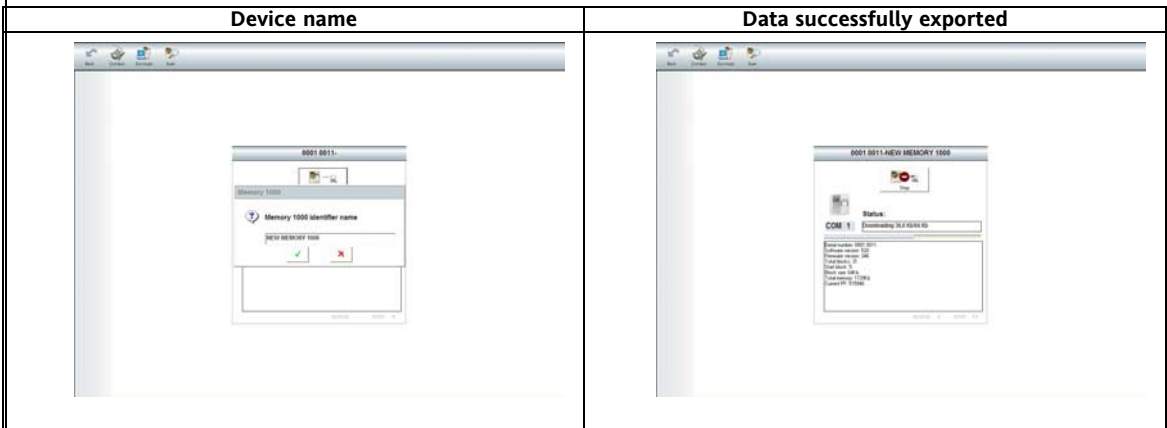


- The first time data is exported, give the Memory 1000 connected a name.
- Click on transfer: data will be downloaded to the PC (this will take a few minutes).

7.6.3 Tables / Graphs

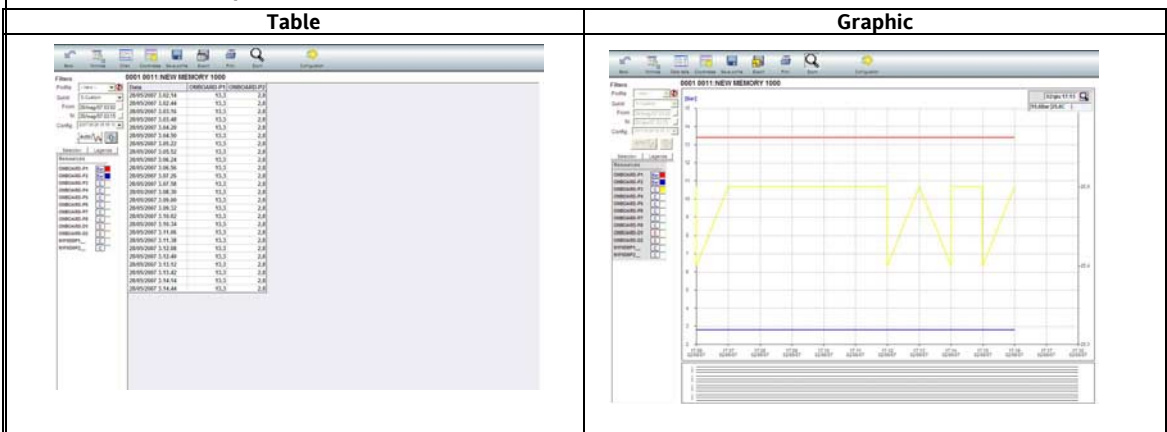

- Table or Graph display format.
- Define a Profile in the Filters section, select a report and a view data date.
- Select the resource(s) to be displayed.
- You can zoom on the graph to view the x-y values and configure the scale.
- You can now save the profile, export and print the data.

7.6.4 List of plants

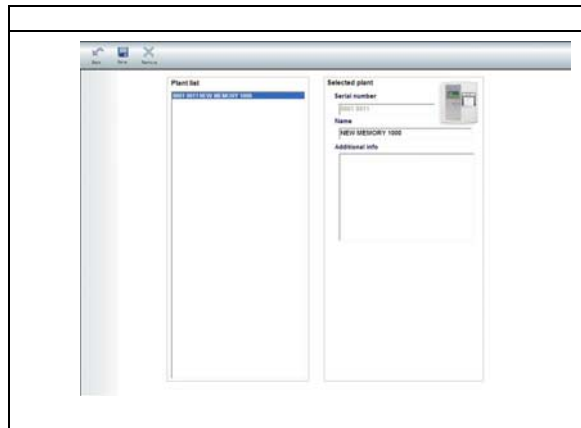

- When more than one *plant* is managed, you can select the *plant* that you want to download and save data for.

8 ELECTRICAL CONNECTIONS



8.1 General warnings

IMPORTANT!

Switch off the device before working on the *electrical connections*. All electric work must be performed by a qualified electrician.

To ensure proper connections, the following warnings must be observed:

- Power supply.
- Use cables of the right size for the terminals used.
- Separate the cables of probes and *digital inputs* from inductive loads and high voltage connections to prevent any electromagnetic interference. Do not place probe cables near any electric devices (switches, meters, etc.).
- Make connections as short as possible and do not wind them around electrically connected parts.
- Do not touch electronic components on boards to prevent the build up of static electricity.

8.1.1 Power supply - High voltage output (relay).

Do not exceed the maximum permitted current; for higher loads, use a contactor with sufficient power capacity.

Important!

Make sure that power supply is the correct voltage for the device.



Temperature probes

8.1.2 Analogue inputs-Probes

The *temperature probes* have no characteristic insertion polarity and can be extended using standard bipolar cable (note that extending cables can affect the performance of the device in terms of electromagnetic compatibility: take great care with the wiring).



Pressure probes
Humidity probes

Important!

Pressure probes have a specific insertion polarity which must be observed.

Signal cables (temperature/pressure/humidity probes, *digital inputs*) must be cabled separately from high voltage cables. Eliwell supplied cables are recommended. Contact Eliwell sales department for item availability.

8.1.3 RS485 connection

RS485

Use a shielded and "twisted", twin-conductor 0.5mm² section cable, plus braiding (i.e. Belden cable model 8762 with PVC sleeve, 2 conductors plus braiding, 20 AWG, nominal capacity between 89pF conductors, nominal capacity between a conductor and 161pF shielding).

See standards relating to EN 50174 data transmission systems for indications on how to lay cables.

Make sure data transmission circuits are well separated from power lines.

A RS-485 network up to 1200m in length featuring a maximum of 15 devices can be connected straight to the device.

This length can be extended and the number of devices for each channel increased using appropriate repeater modules.

See the "Installation of the RS- 485 network" manual for more detailed information.


Attach the 120 (Ohm) 1/4W resistors between the "+" and "-" terminals on the interface and last device in each branch of the network.

8.1.4 RS-232 serial connections

Use the RS232 DB9-DB9 nullmodem cable provided or equivalent cable to connect to a PC.

8.2 Circuit diagrams

The number of *analogue inputs*, *digital inputs* and alarm outputs depends on the Memory 1000 model (see section Annexe A - *Models* and *Accessories*).

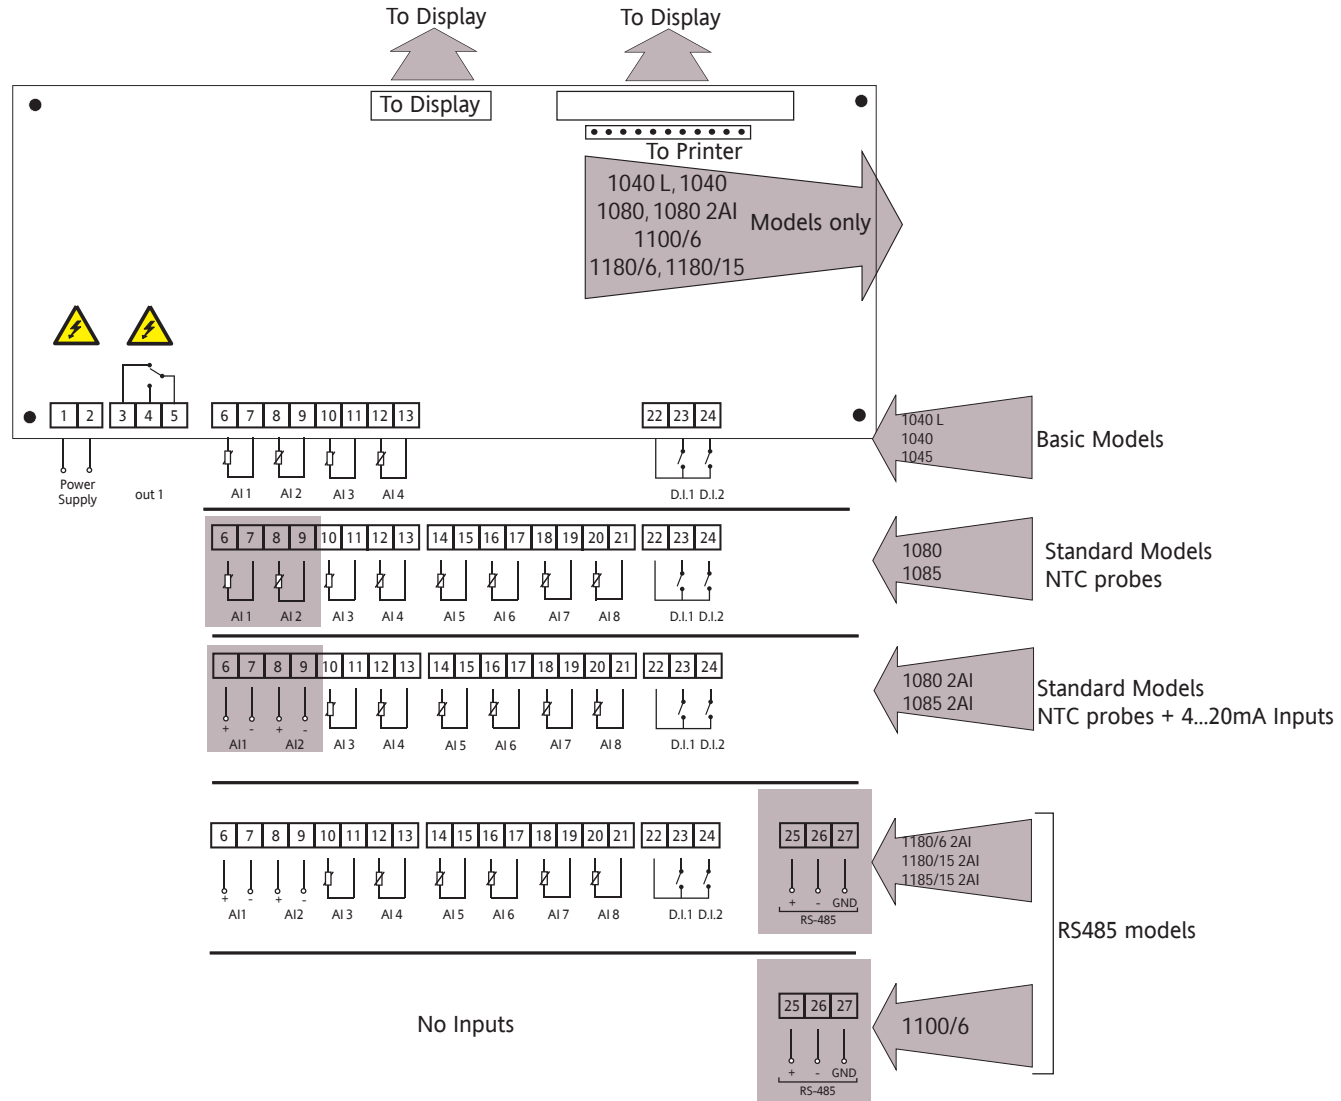


8.2.1 Wiring diagram description


Terminals		Description	Models								
			Basic		Standard NTC		Standard NTC / 4...20mA		RS485		
			1040 L 1040	1045	1080	1085	1080 2AI	1085 2AI	1180/6 2AI 1180/15 2AI	1185/15 2AI	1100/6 (No inputs)
1 – 2	Power Supply	230V ~ power supply	•	•	•	•	•	•	•	•	•
3 – 4 – 5	Out1	Digital output on relay 5(2)A SPDT 250V ~	•	•	•	•	•	•	•	•	•
6 – 7	AI 1	Input for NTC probe	•	•	•	•					
8 – 9	AI 2	4...20mA current input (6= +12V; 7 signal)					•	•	•	•	
10 – 11	AI 3	Input for NTC probe	•	•	•	•	•	•	•	•	
12 – 13	AI 4	Input for NTC probe	•	•	•	•	•	•	•	•	
14 – 15	AI 5	Input for NTC probe			•	•	•	•	•	•	
16 – 17	AI 6	Input for NTC probe			•	•	•	•	•	•	
18 – 19	AI 7	Input for NTC probe			•	•	•	•	•	•	
20 – 21	AI 8	Input for NTC probe			•	•	•	•	•	•	
22 – 23	DI. 1	Digital input D.I.1	•	•	•	•	•	•	•	•	
22 – 24	DI. 2	Digital input D.I.2	•	•	•	•	•	•	•	•	
25 – 26 – 27	RS485	Serial port RS-485 25= + 26= - 27= GND							•	•	•
	To Display	Connection to display	•	•	•	•	•	•	•	•	•
	To Printer	Presence of integrated thermal <i>printer</i>	•		•		•		•		•

8.2.2 Connections with pressure transducers / humidity probes


- 2 wires / 2 fili Power Supply from / da Memory 1000

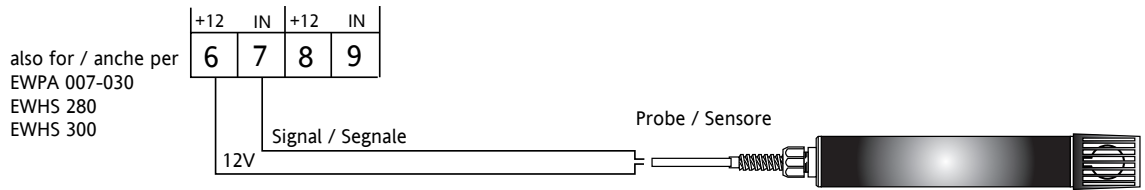

- 2 wires / 2 fili External Power Supply for Transducer / Trasduttore

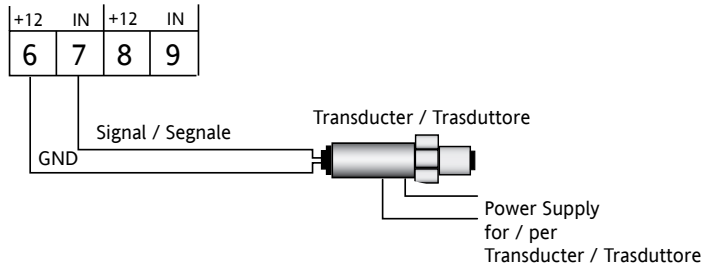


- 3 wires / 3 fili Power Supply from / da Memory 1000

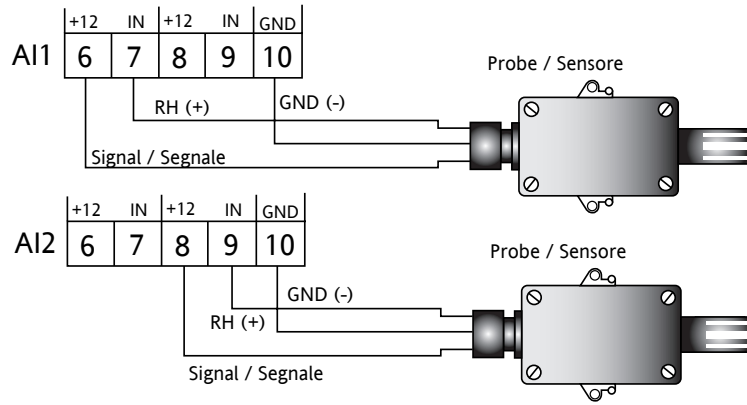


9 MECHANICAL ASSEMBLY

Memory 1000 was designed for wall or panel-mounting (support brackets not supplied).

Remove the screw caps on the right side of the door, pressing lightly on the points indicated by the arrows in Figure 1. Take out the screws and open the door. Drill holes in the backplate at the top or bottom to pass the wires through. See the example in figure 2:

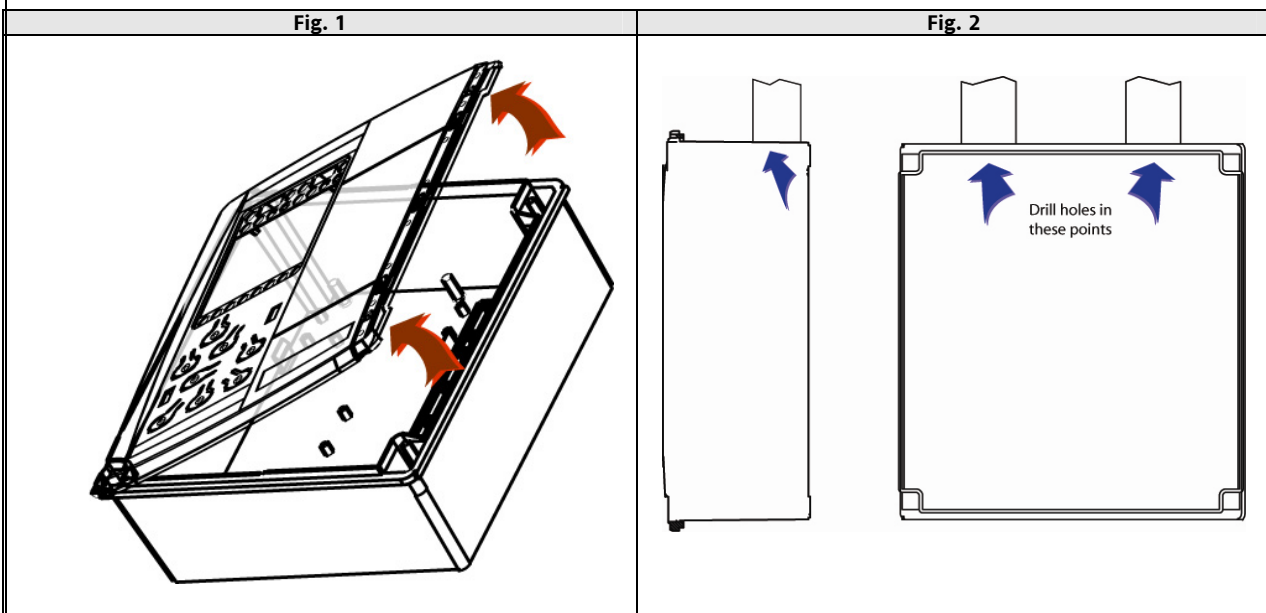

Screw the backplate to the wall using 4 screws (not supplied) to match the holes illustrated in figure 3.

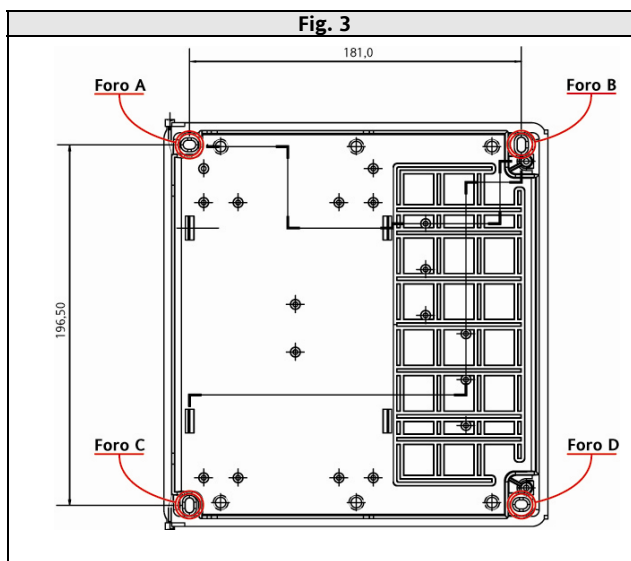

Shut the door by securing it with 2 screws (provided). Replace the screw caps removed earlier from the door (see point 1).

10 SPECIFICATIONS

10.1 General specifications

	Standard	Min.	Max.
Supply voltage	230V~	±10%	
Supply frequency	50Hz/60Hz	---	---
Power draw – <i>printer</i> not in <i>use</i>	5VA	---	---
Power draw – <i>printer</i> in <i>use</i>	20VA	---	---
Insulation rating	2	---	---
Ambient operating temperature	---	0°C	40°C
Ambient operating humidity (non-condensing)	---	10%	90%
Storage temperature	---	-20°C	+ 70°C
Ambient storage humidity (non-condensing)	---	10%	90%

10.2 I/O features

Type	Label	Description	Models	N.B
High voltage digital outputs	Out1	1SPDT 5(2)A 250V~ relay for alarm output	All models	
<i>Digital inputs</i>	DI1 DI2	2 no-voltage <i>digital inputs</i> 5mA contact current	All models	Excluded Memory 1100/6
<i>Analogue inputs</i> 4...20mA	AI1 AI2	2 4...20 mA current inputs 1% full scale accuracy 0.1°C/bar resolution	Memory 1080 2AI Memory 1180/6 2AI Memory 1180/15 2AI Memory 1085 2AI Memory 1185/15 2AI	Current inputs marked with 2AI
<i>Analogue inputs</i> NTC		2 NTC 103AT temperature inputs 10k 0 / 25°C , measurement range -45 °C ÷ +50.0 °C; 1% full scale accuracy Resolution 0.1°C	Memory 1040 L Memory 1040 Memory 1080 Memory 1045 Memory 1085	
<i>Analogue inputs</i> NTC	AI3 AI4	2 NTC 103AT temperature inputs 10k 0 / 25°C , measurement range -45 °C ÷ +50.0 °C; 1% full scale accuracy Resolution 0.1°C	Memory 1040 L Memory 1040 Memory 1045	Models with 4 analogue inputs
<i>Analogue inputs</i> NTC configurable as digital	AI3 AI4 AI5 AI6 AI7 AI8	6 NTC 103AT temperature inputs 10k 0 / 25°C , measurement range -45 °C ÷ +50.0 °C; 1% full scale accuracy Resolution 0.1°C or If the analogue input is listed as not present n temperature inputs + m <i>digital inputs</i> Where n+m=6	Memory 1080 Memory 1085 Memory 1080 2AI Memory 1085 2AI Memory 1180/6 2AI Memory 1180/15 2AI Memory 1185/15 2AI	
Buzzer			All models	
Terminals		Removable screw connector pitch 5.0mm	All models	
Container		PC+ABS plastic resin with V0 flammability rating	All models	
Serial	RS485	1 RS 485 serial	Models with RS485 Memory 1180/6 2AI Memory 1180/15 2AI Memory 1185/15 2AI	
	RS232	1 RS 232 serial	Models with printer	

10.3 Printer

Print type		Impact thermal <i>printer</i>	Models with printer
Roll		Thermal paper Ø 30mm x57mm	
Horizontal resolution		384pt	

10.4 Mechanical dimensions

	Length (L) mm	Height (H) mm	Depth (d) mm	
Total dimensions	210	245	90	(+0.2mm)
Drilling template	202	212	70	

11 USE

11.1 Permitted use

This product was designed to acquire, log and print data.

For safety reasons, the device must be installed and used according to the instructions provided. In particular, parts carrying dangerous voltages must not be accessible in normal conditions.

The device must be adequately protected from water and dust according to the application, and must also only be accessible using tools (with the exception of the front panel).

12 APPLICABLE STANDARDS

12.1 Permitted use

This product was designed to acquire, log and print data.

For safety reasons, the device must be installed and used according to the instructions provided. In particular, parts carrying dangerous voltages must not be accessible in normal conditions.

The device must be adequately protected from water and dust according to the application, and must also only be accessible using tools (with the exception of the front panel).

13 RESPONSABILITY AND RESIDUAL RISKS

Eliwell Controls srl shall not be liable for damage resulting from:

- installation/uses other than those specified and, in particular, which do not comply with the safety requirements set out in the regulations and/or stated herein;
- *use* on panels that do not provide adequate protection against electric shock, water or dust when assembled;
- *use* on panels that allow access to dangerous parts without having to *use* tools;
- installation/*use* on panels that do not comply with the current standards and regulations.

14 DISCLAIMER

This document is the exclusive property of Eliwell Controls Srl and may not be reproduced or circulated unless expressly authorized by the latter.

All possible care has been taken to ensure the accuracy of this document; nevertheless, Eliwell Controls srl cannot accept liability for any damage resulting from its *use*.

15 ANNEXE A – MODELS AND ACCESSORIES

15.1 Models



Model	Total no. of inputs	4..20mA inputs	NTC inputs	Digital inputs	Integrated thermal printer	RS485 serial to expand inputs	Serial data download via RS232
Standard models with no serial for data download							
1040 L	6	-	4 ⁽¹⁾	2	YES	-	-
Standard models with no printer							
1045	6	-	4 ⁽¹⁾	2	NO	-	YES
1085	10	-	8 ⁽¹⁾	2	NO	-	YES
1085 2AI	10	2	6 ⁽²⁾	2	NO	-	YES
Standard models with printer							
1040	6	-	4 ⁽¹⁾	2	YES	-	YES
1080	10	-	8 ⁽¹⁾	2	YES	-	YES
1080 2AI	10	2	6 ⁽²⁾	2	YES	-	YES
RS485 expandable models with or without printer							
1100/6	-	-	-	0	YES	6 controllers	-
1180/6 2AI	10	2	6 ⁽²⁾	2	YES	6 controllers	YES
1180/15 2AI	10	2	6 ⁽²⁾	2	YES	15 controllers	YES
1185/15 2AI	10	2	6 ⁽²⁾	2	-	15 controllers	YES

NOTES

(1) 2 fixed NTC, the rest can be configured as NTC/digital from parameter.

(2) Configurable as NTC/digital from parameter.

15.2 Accessories

	Name	Part number	Description
Paper roll			
	Paper roll (Paper Roll)	RC444444	Paper roll for integrated printer
Temperature probes			
	TEMPERATURE PROBES⁽¹⁾ ⁽²⁾	SN691150	NTC 103AT 1.5m probe, (plastic cap, 2-wire cable);
		SN691300	NTC 103AT 3m probe (plastic cap, 2-wire cable);
		SN691600	NTC 103AT 6m probe (plastic cap, 2-wire cable);
Pressure transducers			
	EWPA 030	TD200130	EWPA 030 4...20mA 0/30bar pressure transducer with male connector
		TD200030	EWPA 030 4...20mA 0/30bar pressure transducer with female connector
	EWPA 007	TD200107	EWPA 007 4...20mA -5/8bar pressure transducer with male connector
		TD300008	EWPA 007 4...20mA -5/8bar pressure transducer with female connector
Humidity transducers			

	Name	Part number	Description
	EWHS 280	SN560000	Relative humidity transducer (range 20%...90%)
	EWHS 300	SN520000	Relative humidity transducer (range 5%...98%)
	EWHS 310	SN510000	Humidity(range 20%...90%) and temperature(Range -10°C...+70°C) transducers
RS485 connectivity modules			
	150 TTL <i>RS485</i> bus adapter	BA11250N3700	Communication interface TTL/RS-485 12V aux. output for power supply to device TTL cable, L = 1m (²)
	130 TTL <i>RS485</i> bus adapter	BA10000R3700	Communication interface TTL/RS-485 TTL cable, L = 1m (²)
Wireless connectivity modules			
	RadioAdapter /S	BARF0DS00NH00	<i>RS485</i> or TTL / IEE802.15.4 converter
	RadioKey	CCA0B0T01T000	Wireless network configuration key
Software Tools			
	Memory1000 DataManager	5555966	It comes with MS Windows compatible data logging software to export, save and view data in table and graph format.

(1) Various items available. Contact Sales Department.

(2) Various lengths can be requested.

GENERAL NOTES:

- Eliwell can also supply a variety of different NTC probes depending on the cable type (PVC or silicon) and length.

16 ANNEXE B – ELIWELL INSTRUMENTS

16.1 Eliwell devices

Part number	Item	MSK	MIN VER	Number of inputs	Input	Relay outputs	Power supply	Notes
IC11CI0XCD700	IC 912LX/C PTC 230V	131	24	1	PTC/NTC*	1	230V~	Heating / Cooling
IC11ZI0XHD700	IC 912LX/H PT100/TC 230V	104	25	1	Pt100 / Thermocouples*	1	230V~	Heating / Cooling
IR11I00XUD700	IC 912LX/R U %RH 230V 4/20mA	132	23	1	4...20mA / 0...10V*	1	230V~	Heating / Cooling
IC12CI0XCD700	IC 915LX/C PTC 230V	131	24	1	PTC/NTC*	2	230V~	Heating / Cooling / Neutral zone
IC12ZI0XHD700	IC 915LX/H PT100/TC 230V	104	25	1	Pt100 / Thermocouples*	2	230V~	Heating / Cooling / Neutral zone
IR12I00XBD700	IC 915LX/R H/D %RH 230V 4/20mA	132	23	1	4...20mA / 0...10V*	2	230V~	Heating / Cooling / Neutral zone
ID32DF0XCD300	ID 983LX C NTC 12V	180	08	2	NTC / PTC*	2	12V~/ ∞	For refrigeration, with clock
ID32DF1XCD300	ID 983LX CK NTC 12V	180	08	2	NTC / PTC*	2	12V~/ ∞	For refrigeration, with clock and link
ID34DF0XCD300	ID 985LX C NTC 12V	180	08	3	NTC / PTC*	4	12V~/ ∞	For refrigeration, with clock
ID34DF1XCD300	ID 985LX CK NTC 12V	180	08	3	NTC / PTC*	4	12V~/ ∞	For refrigeration, with clock and link

NOTE

* Configurable from parameter.

17 ANALYTIC INDEX

0	
<i>0 – Suspend</i>	10
1	
<i>1 – Rec On/Off</i>	10
2	
<i>2 – Data</i>	10
<i>2.3 Print text</i>	22
3	
<i>3 – Alarms</i>	10
4	
<i>4 – Std. Configuration</i>	10
5	
<i>5– Adv. Configuration</i>	10
6	
<i>6 - System Information</i>	10
A	
<i>Accessories</i>	38
<i>ADVANCED CONFIGURATION</i>	19
Alarms	19
<i>ALARMS</i>	11
<i>Analogue alarms</i>	14
<i>Analogue Inputs</i>	14
<i>Analogue inputs display</i>	6
<i>Analogue inputs-Probes</i>	31
<i>ANNEXE A – MODELS AND ACCESSORIES</i>	38
<i>ANNEXE B – ELIWELL INSTRUMENTS</i>	40
<i>APPLICABLE STANDARDS</i>	37
C	
<i>Circuit diagrams</i>	32
Clear log	11
Clock and Language	13
<i>Connections with pressure transducers / humidity probes</i>	34
Control panel	29
D	
<i>Description of keys and associated functions</i>	4
<i>Device Analogue Inputs</i>	18
<i>Digital alarms</i>	16
<i>Digital input display</i>	6
<i>Digital Inputs</i>	15
<i>DISCLAIMER</i>	37
E	
<i>Edit values</i>	5
<i>ELECTRICAL CONNECTIONS</i>	31
<i>Eliwell devices</i>	40
<i>Example of graph</i>	23
Example of Print Network 1 Configuration	26
<i>Example of Print Onboard Resource Configuration</i>	24
<i>Examples of prints</i>	23
F	
<i>First switch on</i>	9
G	
<i>General Info</i>	17
General specifications	36
General warnings	31
I	
I/O features	36
Installing the Memory 1000 DataManager	
CDROM	27
<i>Introduction</i>	27
<i>INTRODUCTION</i>	3
K	
<i>Keys</i>	4; 21
L	
LCD & Buzzer	19
<i>LEDs</i>	21
<i>LEDs and Display</i>	6
<i>Legibility on thermal paper</i>	26
List of plants	30
M	
Main display	6
<i>MECHANICAL ASSEMBLY</i>	35
Mechanical dimensions	36
<i>MEMORY 1000 DATA MANAGER</i>	27
<i>Menu 2.0 Periods</i>	22
<i>Menu 2.2 Graph Print</i>	22
<i>Models</i>	38
<i>Models available</i>	3
N	
Navigation bar	28
<i>Network 1</i>	16; 20
<i>Network 3</i>	20
<i>Not used</i>	11; 13; 17; 18; 20
O	
Onboard resources	13
<i>Opening screen</i>	27
P	
Passwords	20
<i>Permitted use</i>	37
Plant	13
<i>Power supply - High voltage output (relay)</i>	31
<i>Pressure probes Humidity probes</i>	31
Print alarm log	11
Print config.	16; 18
<i>Print menu</i>	22
Print text example	24
<i>Printer</i>	19; 36
<i>PRINTER</i>	21
<i>Printer Configuration</i>	21
<i>Printer Errors</i>	26
R	
<i>RESPONSABILITY AND RESIDUAL RISKS</i>	37
<i>RS-232 serial connections</i>	31

RS485	31
RS485 connection	31
S	
Self-configuration	17
Serial data	29
Settings - General Menu	7
SPECIFICATIONS.....	36
STANDARD CONFIGURATION	12
System requirements	27
System requirements (Memory 1000)	27

T	
Tables / Graphs	29
Temperature probes.....	31
To set password (menu 5.8 Passwords).....	9
U	
Units	17
Units of Measure table	14
USE.....	37
USER INTERFACE AND MENUS	4
W	
Wiring diagram description	33



Eliwell Controls S.r.l.

Via dell' Industria, 15 Zona Industriale Paludi
32010 Pieve d' Alpago (BL) Italy
Telephone +39 0437 986 111
Facsimile +39 0437 989 066

Sales:

+39 0437 986 100 (Italy)
+39 0437 986 200 (other countries)
saleseliwell@invensyscontrols.com

Technical helpline:

+39 0437 986 300
E-mail techsuppeliwell@invensyscontrols.com

www.eliwell.it

ISO 9001

